



No.1800


リビングチェア

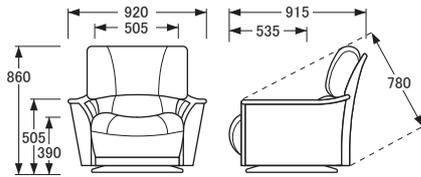


A-1800R

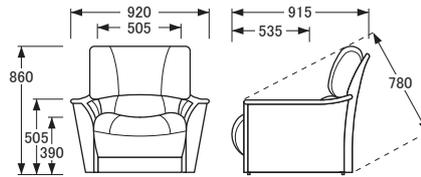


A-1800

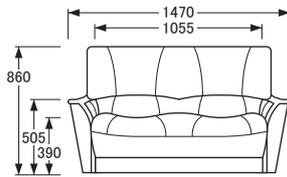


L-1800

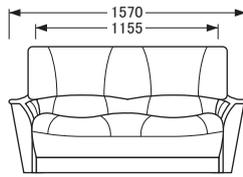


WL-1800〔157〕

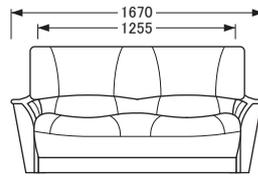


WL-1800〔167〕

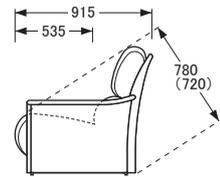


側面
()はロックダウン時

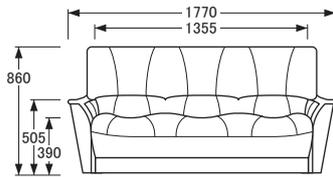

WL-1800〔177〕

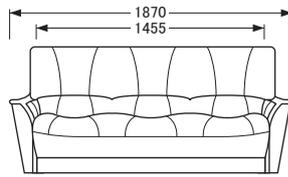


S-1800

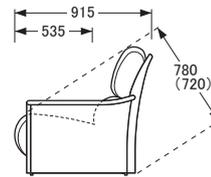


側面
()はロックダウン時

〔皮革〕

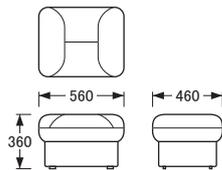

No.1800スツール〔SH36〕

〔ソフトレザー・布・ラムース〕

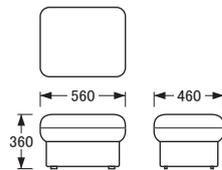

No.1800スツール〔SH36〕