



# No.1800


リビングチェア

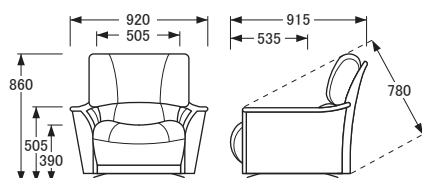


A-1800R

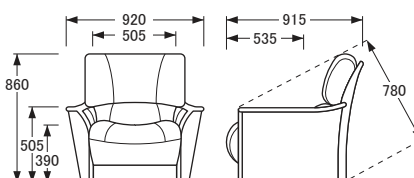


A-1800

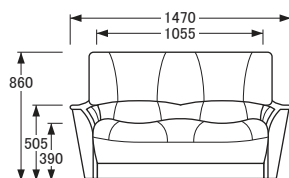


L-1800

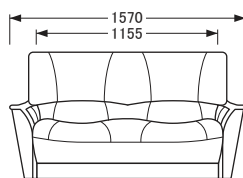


WL-1800[157]

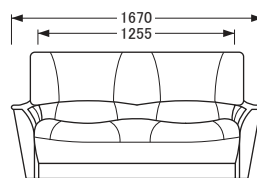


WL-1800[167]

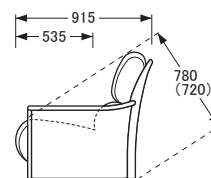


側面  
( )はロックダウン時

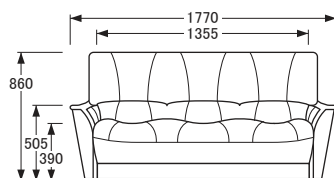

WL-1800[177]

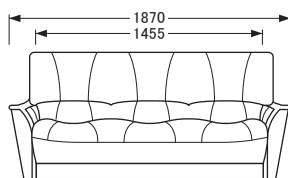

S-1800

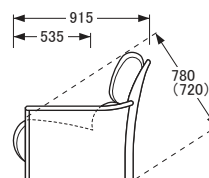

側面  
( )はロックダウン時