



No.4900


リビングチェア

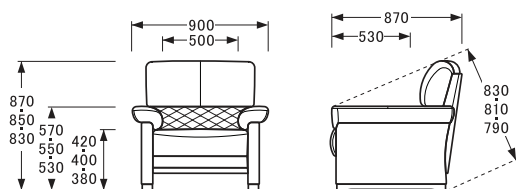


[W90SH38・40・42]

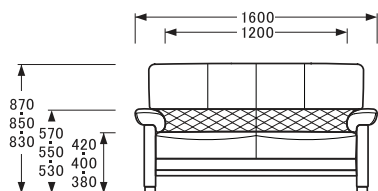


[W160SH38・40・42]

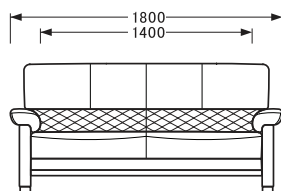

[W180SH38・40・42]

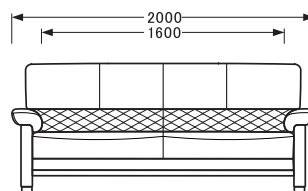

[W200SH38・40・42]

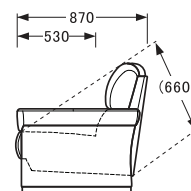

()はノックダウン時
※WSのみ